 


Care for customers from the heart

User Manual

Easy Fold

Care for customers from the heart

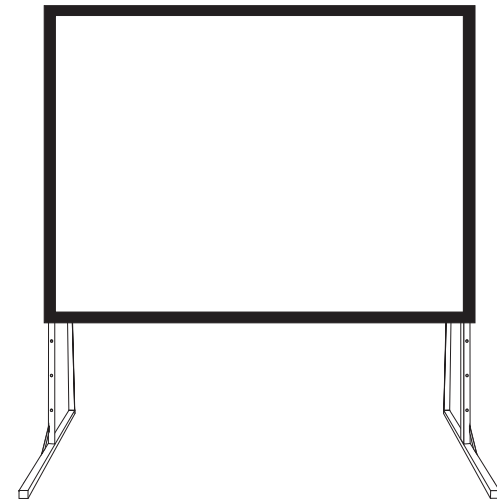

- Good clear picture quality
- Exquisite design
- Easy to use



Thank you for choosing our screen. Please read through these instructions before using the product.

Thank you for choosing our screen. Please read through the user manual before using the screen. Correct usage and maintenance will insure a long life for the product.

User instructions

- When setting up the projection screen, care must be taken to distinguish between the front and back of the screen fabric. The back of the fabric will have labels on it.
 - Dust, dirt and scratches on the projection surface will affect the picture quality, take note of the points below to prevent this:
 1. Do not touch the projection surface with hands.
 2. Do not write or draw on the projection surface.
 3. Do not use fingers or sharp objects to point on the projection surface, this will damage the screen fabric.
 4. Use a soft damp cloth to clean the projection surface, do not use chemical cleaning agents or alcohol. Use clean water.
- After using the screen, disassemble the screen and store it in the box provided.
To avoid accidental damage and injury the screen should only be operated by adults.

 
Product Discription

- **Design:**
The aluminium frame is designed to be light weight and easily operated. This makes it easy to carry, assemble and disassemble.
- **Screen Fabric:**
The screen fabric is attached to the rectangular frame and held in place by several press studs, which ensure an evenly stretched and perfectly flat surface.
The front and rear projection fabric has a viewing angle of 100° and a gain of 1.0.
Both types of fabric are durable and can be folded many times with out damage or disortion.
- **Assembly:**
The screen can be assembled in 3 minutes and with out the use of tools. When not in use the screen is stored in an impact resistant carrying case.
- **Ideal for:**
Business meetings, churches, schools, family centers and industrial training rooms.

Correct use of the projection screen will ensure better results.

For front projection assemble and view the screen as indicated in Fig.1.

For rear projection assemble and view the screen as indicated in Fig.2.

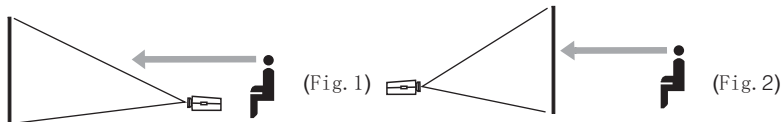

Content and accessories list: When unpacking the screen, check that all the parts from the appropriate list are there.

Use the parts as instructed by the user manual.

(Parts list)250 inches

Specified screen size(inches)		250	
Part	Part number	Quantity	
Folding frame	1	1	Pcs
Screen fabric	2	1	Pcs
Folding legs	3	2	Pcs
Screen fabric bag	4	1	Pcs
Hand screws	5	14	Pcs
User manual	6	1	Pcs
Service card	7	1	Pcs
QC Pass	8	1	Pcs

(Parts list)100 inches-200 inches

Specified screen size(inches)		100, 120, 150, 180, 200	
Part	Part number	Quantity	
Folding frame	1	1	Pcs
Screen fabric	2	1	Pcs
Folding legs	3	2	Pcs
Screen fabric bag	4	1	Pcs
Hand screws	5	12	Pcs
User manual	6	1	Pcs
Service card	7	1	Pcs
QC Pass	8	1	Pcs


Note: The part lists above are subject to change without prior notice.

Part diagrams



Folding frame 	Front projection screen fabric 	QC PASS
Screen fabric bag 	Hand screw (12pcs) 	User manual
Left and right folding legs 	Rear projection screen fabric 	

Note: The part diagrams above are subject to change without prior notice.

 
Assembly instructions

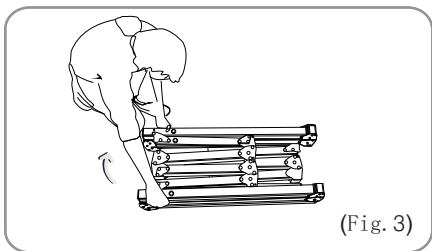

  
1. Take the frame out of the box and place it on a flat surface. Unfold the longer sections first. (Fig. 3+4)

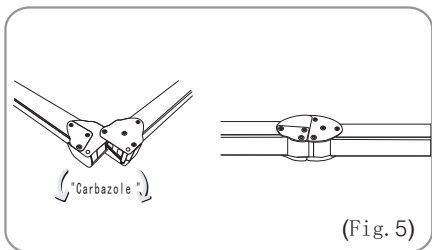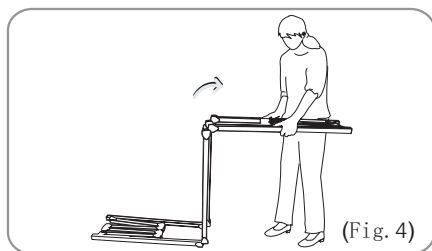


 
2. Unfold the frame until the latch on the hinge "clicks" into place. Repeat the procedure for the shorter sections. (Fig. 5+6)

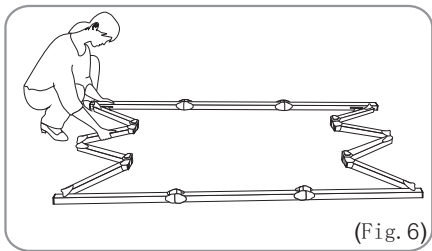


Assembly instructions

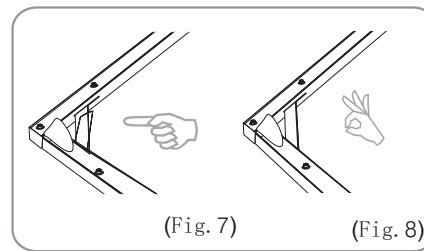 


  3. Make sure all 4 corners of the frame are at 90° and the hinged support bar is straight and not bent. (Fig. 7-10)

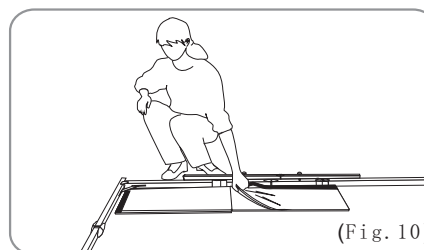
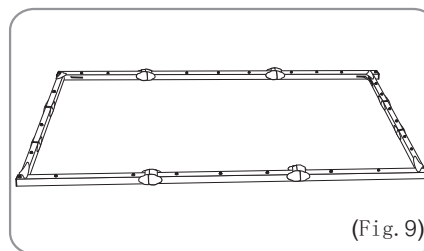


  4. Take the screen fabric out of the bag and put it inside the frame next to the corner. Unfold as shown in the diagram. (Fig. 10+11)



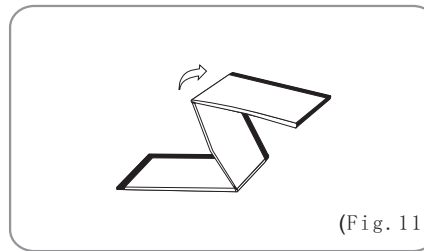


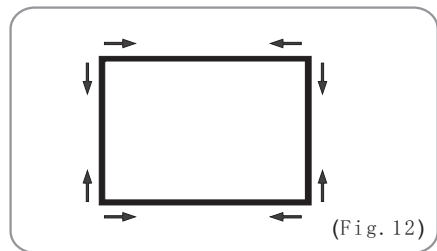

  
5. Once the screen fabric is fully unfolded, secure it to the frame by the press studs. Secure the press studs in the order shown in Fig. 12-16.

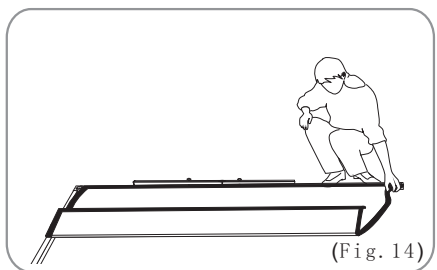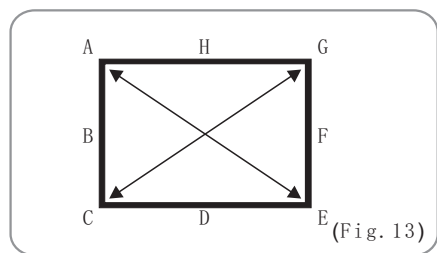

   6. Fasten the buckles by following step CG → AE → BDFH → fasten the rest buckles one by one. (Fig. 13)

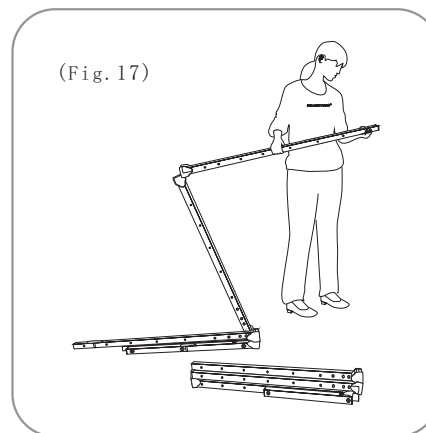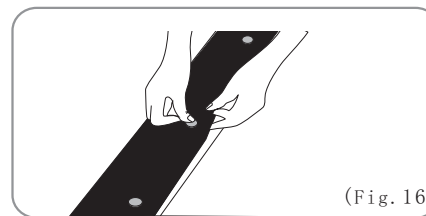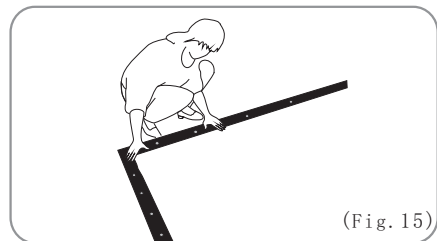


 7. Take the folding legs out of the box and unfold as shown in Fig. 17. and make sure the hinges click into place.

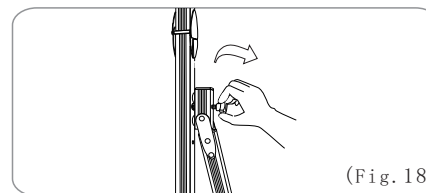


8. Once the legs are locked in place use the hand screws to secure the support leg to the vertical leg in an appropriate position. (Fig. 18-19)

 Assembly instructions

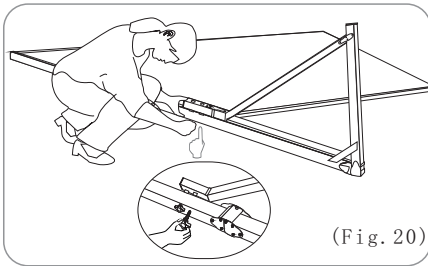


(Fig. 20)

 9. Lay the frame on the floor and position the legs over the sides of the frame. Use the hand screws to attach the frame to the legs. Once the legs are firmly attached lift the frame into the vertical position. (Fig. 20+21)

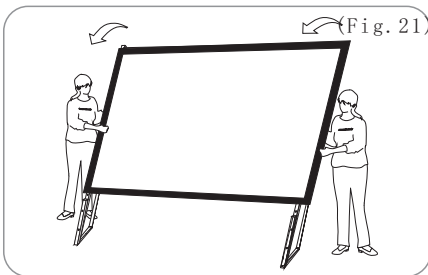


(Fig. 21)

 
10. When the frame is in the vertical position fold the front facing feet of the legs out. Assembly is complete and the projection screen will be stable on a flat surface. (Fig. 22)

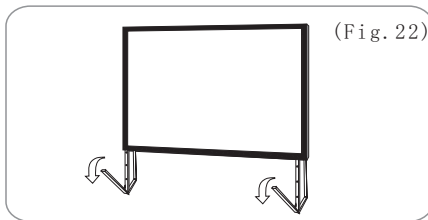

(Fig. 22)

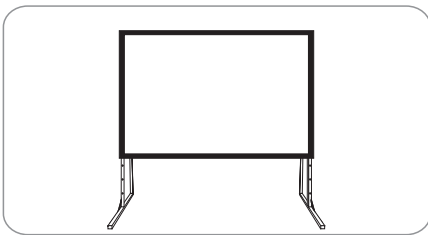 

Assembly instructions

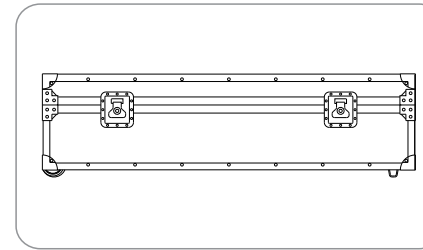 

11. After using the screen disassemble the screen and store it in the box provided. To disassemble the screen, implement the assemble procedure in reverse order.

Safety Notice



Warning

Misuse of the screen may cause damage to the screen, or injury to persons.



Do not climb on the screen

Do not hang things from the screen or climb on it. Doing so may cause the screen to fall off and damage the screen and cause injury.



Do not disassemble

Do not disassemble the screen. Doing so may damage the screen and may cause injury. If the screen needs to be repaired, contact the dealer from which the screen was purchased.



Notice

The projection screen must be set up on a stable surface where there is sufficient space. Failure to do so may cause the screen to fall over causing damage to the screen and injury to persons.



Warning

After using the projection screen disassemble the screen and store it in the box provided. This will protect it from dust, dirt and accidental damage

Note: If the screen is faulty or is damaged in any way do not try to repair the projection screen yourself. Contact customer service to arrange for it to be repaired. The projection screen parts and specifications are subject to change with out prior notice.

Screen Specifications

Ratio	Size (inches)	Aluminium Frame size	Gain	Projection area WxH (mm)	B (mm)	Height 2 H2 (mm)		Height 1 H1 (mm)	
						max	min	max	min
4:3	100	32x32	1.0	2032x1524	75	2650	1900	970	220
4:3	120	32x32	1.0	2438x1828	75	3425	2225	1393	193
4:3	150	32x32	1.0	3048x2286	75	4028	2678	1540	190
4:3	180	32x32	1.0	3658x2743	75	4256	3206	1312	262
4:3	200	32x32	1.0	4046x3048	75	4330	3430	1086	186
4:3	250	32x32	1.0	5080x3810	100	5538	4188	1530	180

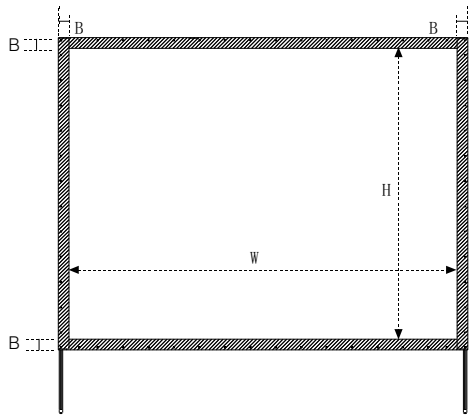 


Fig. 21


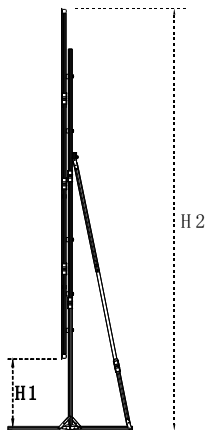 



Fig. 22

Notice

 
Do Not

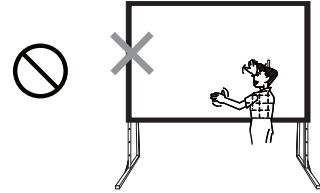

 Do not touch the projection surface with hands

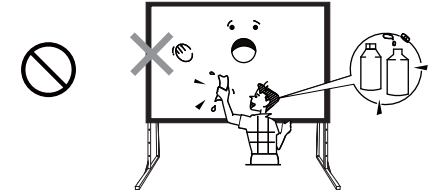

 Do not use chemical cleaning agents to clean the projection surface.

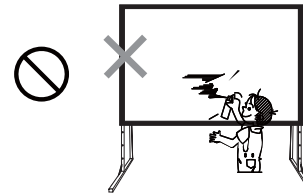


Do not draw or write on the projection surface




Do not disassemble the screen.

 Correct

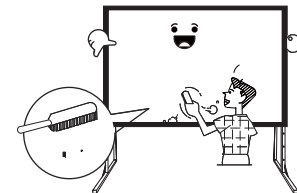

 Use a soft cloth or brush to clean the projection surface.

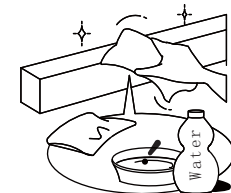

Use water and a soft cloth to clean the screen.



After using the screen disassemble the screen and store it in the box provided.

